

# Chapter Overview

<b>Foreword</b>	1
<b>Chapter Overview</b>	5
<b>Chapter 1</b> INTRODUCTION, Installation & License activation	7
<b>Chapter 2</b> BASIS	17
<b>Chapter 3</b> ENERGY	159
<b>Chapter 4</b> ENVIRONMENT	291
<b>Chapter 5</b> VISUALIZATION	417
<b>Chapter 6</b> ECONOMICS	473
<b>Chapter 7</b> <del>WindPLAN(not included, please see ver. 2.5)</del>	
<b>Chapter 8</b> OPTIMIZATION	493
<b>Chapter 9</b> CFD-interface	533
<b>Chapter 10</b> eGRID	551
<b>Chapter 11</b> MCP	597
<b>Chapter 12</b> LOSS & UNCERTAINTY	531
<b>Chapter 13</b> SITE COMPLIANCE (in preparation)	

## **Appendices**

**663**

A: Decibel

B: Air Density

C: Wake Models